



INSTALLATION INSTRUCTIONS


2024+ Chevy Colorado/GMC Canyon Crew-Cab Under Rear-Seat Lockbox #343

Please read and fill out the enclosed warranty registration card or register online at <https://tuffyprompts.com/help/warranty-information/warranty-registration/> to activate your warranty.

PARTS CHECKLIST



Underseat Lockbox #343

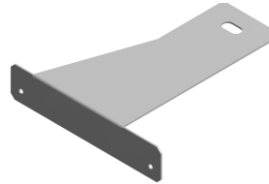

#15 (1) Mounting Bracket (Right)



#16 (1) Mounting Bracket (Left)

SHIPPING PACKAGE CHECKLIST




#13.1 (2) M10x45mm Cap Screw



#13.2 (2) 3/8" Flat Washer



#13.3 (4) #6-32x1/2 Flat Head Screw

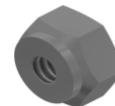

#13.4 (4) #6-32 Nylock Nut



#13.5 (4) #6 Flat Washer

Tools needed for standard installation

•8mm Socket •10mm Socket •13mm Socket •T47 Torx Wrench •5/16" Socket •5/64" Hex Wrench

PLEASE READ ALL INSTRUCTIONS THOROUGHLY BEFORE STARTING INSTALLATION.

1. Remove all contents from the shipping box and confirm that all the components listed above are present.
2. Assemble the rear mounting brackets (#15 and #16) to the enclosure using (4) #13.3 Screws, (4) #13.5 Washers, and (4) #13.4 Nylock Nuts (Figure 1).

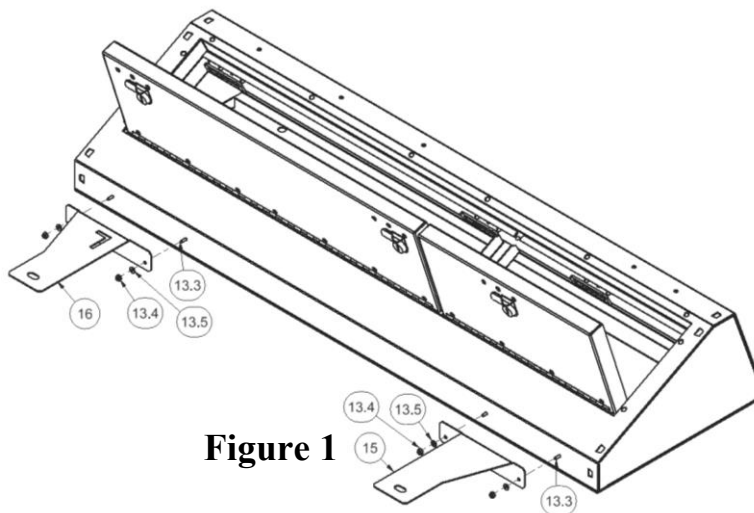


Figure 1

'14-'22 Install

3. Lift both rear seats so they are secured in the upright position.
4. Remove the (7) Factory Rubber Bumpers from the top of the plastic storage enclosure. Five (5) are located at the top of the plastic enclosure, and two (2) are found at the rear on either side, near the rear mounting points. **NOTE:** The five (5) on top will be reused on the #343 Lockbox.
5. Remove the (4) Factory Plastic Carpet Anchors (located in the small cubbies on the left and right side of the plastic enclosure) from the carpet by applying upwards pressure, while unscrewing them. **NOTE:** These parts cannot be separated from the plastic enclosure and attempting to do so will damage them.
6. Lift the plastic enclosure off the metal support structure and set aside.
7. Remove the rear mounting nuts off the studs that hold the factory metal supports. **NOTE:** These nuts will be reused.
8. Remove the forward mounting bolts near the vertical support legs. **NOTE:** These bolts will not be reused but should be saved for future replacement of Factory Enclosure if so desired.
9. Place the assembled #343 Lockbox on the floor of the vehicle with the mounting brackets toward the rear of the vehicle. **Note:** The enclosure is quite heavy, and it is easier to have a second person for this step.
10. Slide the enclosure into position with the holes in the #15 and #16 Rear Mounting Brackets over the rear mounting studs.
11. Replace, but do not tighten the Factory Rear Mounting Nuts removed in Step #7.
12. Install, but do not tighten (2) #13.1 Cap Screws, and (2) #13.2 Flat Washers at the front of the #343 Enclosure. **Note: Figure 2** (Lids removed for clarity).

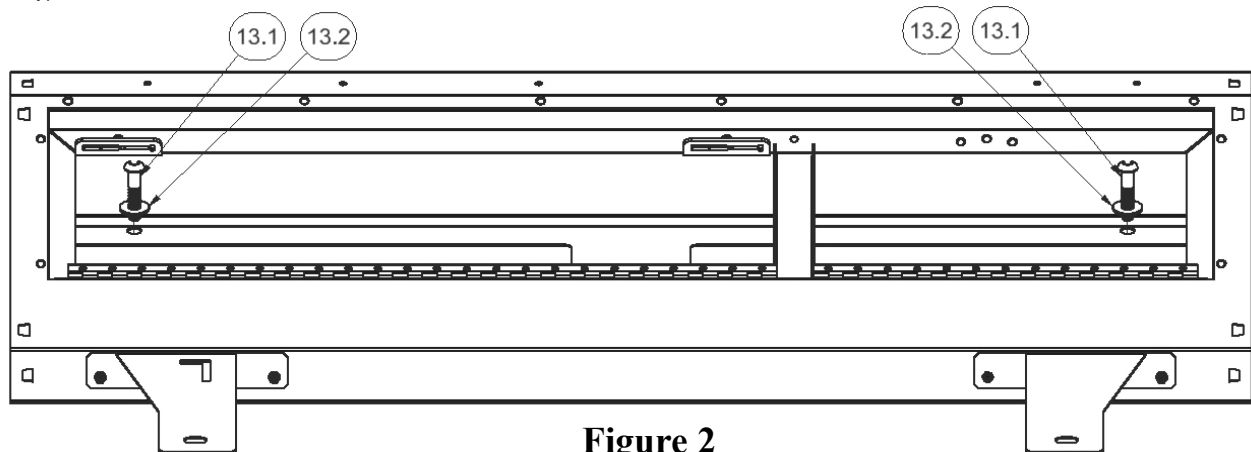


Figure 2

13. Center the enclosure over all the mounting points and tighten the mounting hardware.
14. Reinstall (5) of the Factory Rubber Bumpers (removed in Step #4) using the factory hardware. (**Figure 3**)


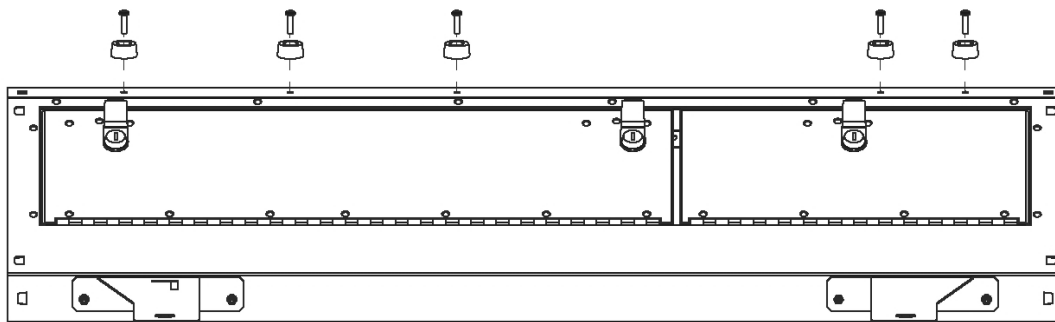


Figure 3

'23+ Install

1. Lift both rear seats so they are secured in the upright position and remove jack and tools from the plastic storage enclosure
2. Remove the (7) Factory Rubber Bumpers from the top of the plastic storage enclosure. Five (5) are located at the top of the plastic enclosure, and two (2) are found at the rear on either side, near the rear mounting points. NOTE: The five (5) on top will be reused on the #343 Lockbox.
3. Lift out the plastic storage enclosure and set aside
4. Remove the (2) OEM hex nuts under the back of the seat and the (2) Torx nuts at the front feet of the metal frame and set aside the metal frame.
5. Set your 343 in open space starting on the driver's side.
6. Lift your 343 over the exposed power inverter and set it down over the power inverter so the power inverter is inside the 343.
7. Replace, but do not tighten the Factory Rear Mounting Nuts removed in Step #4.
8. Install, but do not tighten (2) #13.1 Cap Screws, and (2) #13.2 Flat Washers at the front of the #343 Enclosure. **See Figure 2.**
9. Center the enclosure over all the mounting points and tighten the mounting hardware.
10. Reinstall (5) of the Factory Rubber Bumpers (removed in Step #4) using the factory hardware.
11. Relocate the lug wrench/tool bundle removed from the plastic enclosure in Step #6 to the front face of the lockbox, either to the outside of the box(as shown in Figure 4) or inside the lockbox, using the factory straps and the 4 slots in the face.

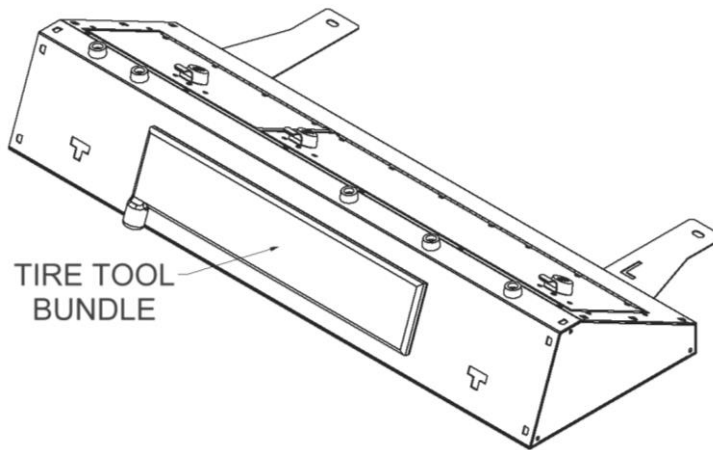

Call (800)348-8339 for Technical Support