


INSTALLATION INSTRUCTIONS

CONSOLE SAFE

PART NUMBER: 413-01

2023-2026 FORD SUPER DUTY

PARTS CHECKLIST

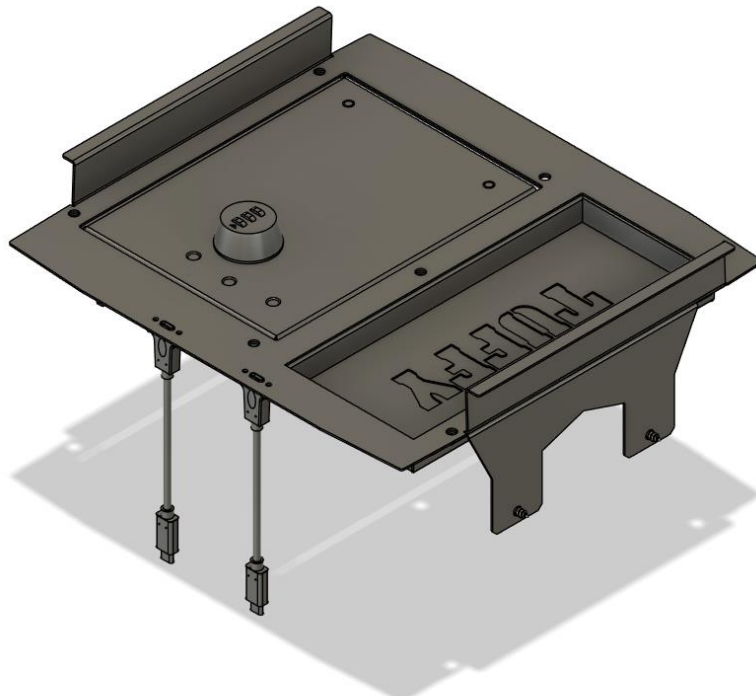

413-01 CONSOLE SAFE (COMBINATION LOCK OPTION SHOWN)

SHIPPING PACKAGE CHECKLIST



#1 (4) #10 x 3/8" TAPPING SCREWS


 **PLEASE READ ALL INSTRUCTIONS THOROUGHLY BEFORE STARTING INSTALLATION**

TOOLS NEEDED FOR INSTALLATION

- #2 Phillips Head Screwdriver (Short Handle)

INSTALLATION INSTRUCTIONS

1. Remove all contents from the shipping box and confirm you have all the components listed in the Shipping Package Checklist.
2. Lower the Console Safe down in the vehicle console, with the hinge on the rear side.
3. The flanges on the left and right side of the Console Safe will sit in notches on the sides of the vehicle console.
4. Open the lid of the Console Safe and locate the four tabs with mounting holes protruding down on the Console Safe, as circled in the image below. These holes will be the screw locations mentioned in further steps.

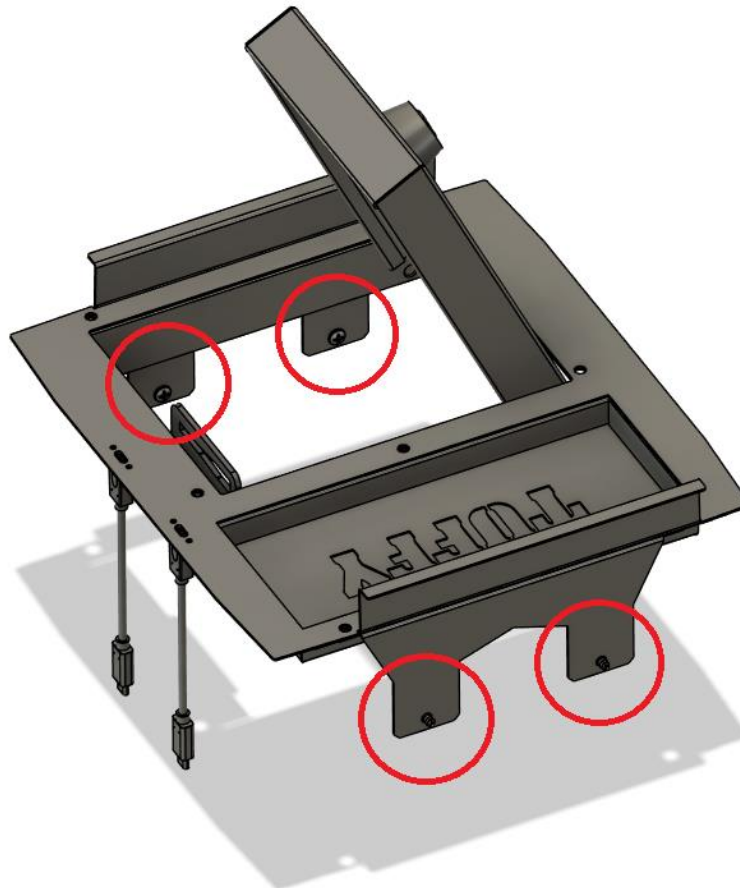

5. Use (1) of the #1 Tapping Screws and your #2 Phillips Head Screwdriver and place screw in the front right mount hole.

NOTE: Before you proceed with Step 6, be sure to apply downward pressure on the top of the Console Safe to make sure proper position is maintained while installing mounting screws. A second set of hands may be helpful for this step.

6. While applying downward pressure to the Console Safe, begin turning the #1 Tapping Screw clockwise, while also apply inward pressure with the screwdriver. Tighten the screw until it contacts the leg of the Console Safe.

IMPORTANT: This tapping screw is designed to cut their own hole while turning. Do not overtighten!!

7. While maintaining downward pressure to the Console Safe, proceed with installing the right rear screw.

TIP: The left side mounting screws may be difficult to reach. Accessing these mounting locations will be easier from the passenger side of the vehicle. A second set of hands to help apply downward pressure on the top of the Console Safe may be helpful for this step.

8. While maintaining downward pressure to the Console Safe, proceed with installing the remaining left side front and rear #1 Tapping Screws.
9. Installation is now complete!