


# INSTALLATION INSTRUCTIONS

## 40" UNDER REAR SEAT DRAWER


(P/N# 44002-01-03/44002-01-01)

2019-2025 RAM CREWCAB

### PARTS CHECKLIST

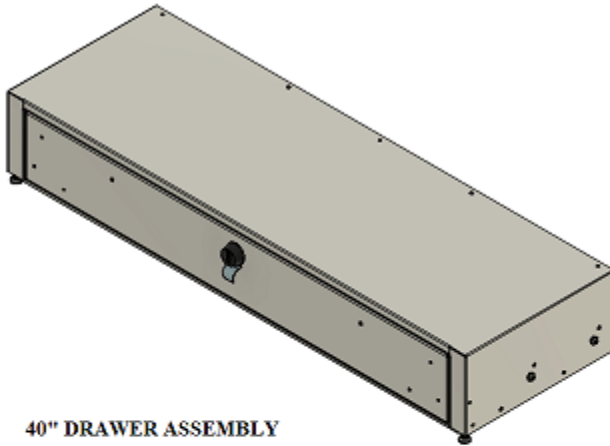

40" DRAWER ASSEMBLY

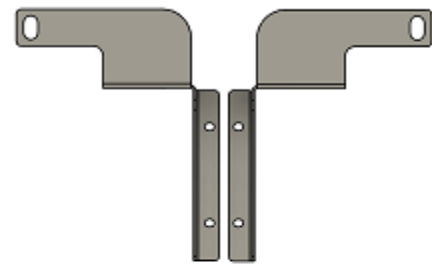

#1- RAM LEFT AND RIGHT  
SIDE MOUNTING BRACKETS



#2 (8) 5/16" TAMPER  
RESIST TORX SCREWS



#3 (2) SELF-LEVELING FEET



T40 TAMPER RESIST  
TORX WRENCH

### TOOLS NEEDED FOR RAM INSTALLATION

- 10mm Socket, Extension, and Ratchet
- 10mm Open End Wrench
- Large Flat Blade Screwdriver

### OPTIONAL TOOLS FOR INSTALLATION (To remove factory tray)

- T20 Torx Wrench


**\*\*\*DUE TO THE HEAVY WEIGHT OF THE PRODUCT A SECOND SET OF HANDS IS RECOMMENDED\*\*\***

1. Prepare the vehicle for installation by flipping both rear seat bottoms up, so they are secured in the upright position.


**THESE STEPS APPLY ONLY TO VEHICLES WITH OPTIONAL UNDER REAR SEAT STORAGE UNIT**

2. Rotate/release the retainer in the middle of the Storage Unit and rotate the Unit to the open/forward position.
3. Remove the bolts from the end plates that secure the Storage Unit to the seat mount pedestals on either side of the Unit. Three bolts hold each side.
4. Remove the Storage Unit by lightly prying one of the end plates toward the center of the vehicle and pivoting that end of the Unit toward the front of the vehicle.
5. Once removed from the vehicle, the end plates may be removed from the Storage Unit by removing the pivot bolts. The end plates may then be reinstalled to the vehicle using the original hardware (Removed in Step #3).
6. Remove the plastic cover that surrounds the retainer. There are two “pressure clips” that hold it in place, one above the retainer (slightly off-center to the Passenger Side), and one below (slightly off-center to the Driver Side).
7. Take out the two bolts holding the retainer bracket to the body tub and remove the retainer bracket.

8. With assistance, place the drawer on the floor of the rear passenger area of the vehicle.
9. Using the **provided T40 Torx Wrench**, install the **#1 Left and Right-Side Mounting Brackets** to the Drawer Assembly using **four #2 Torx Screws** per side. **Do not fully tighten the screws until all of the screws have been started.**

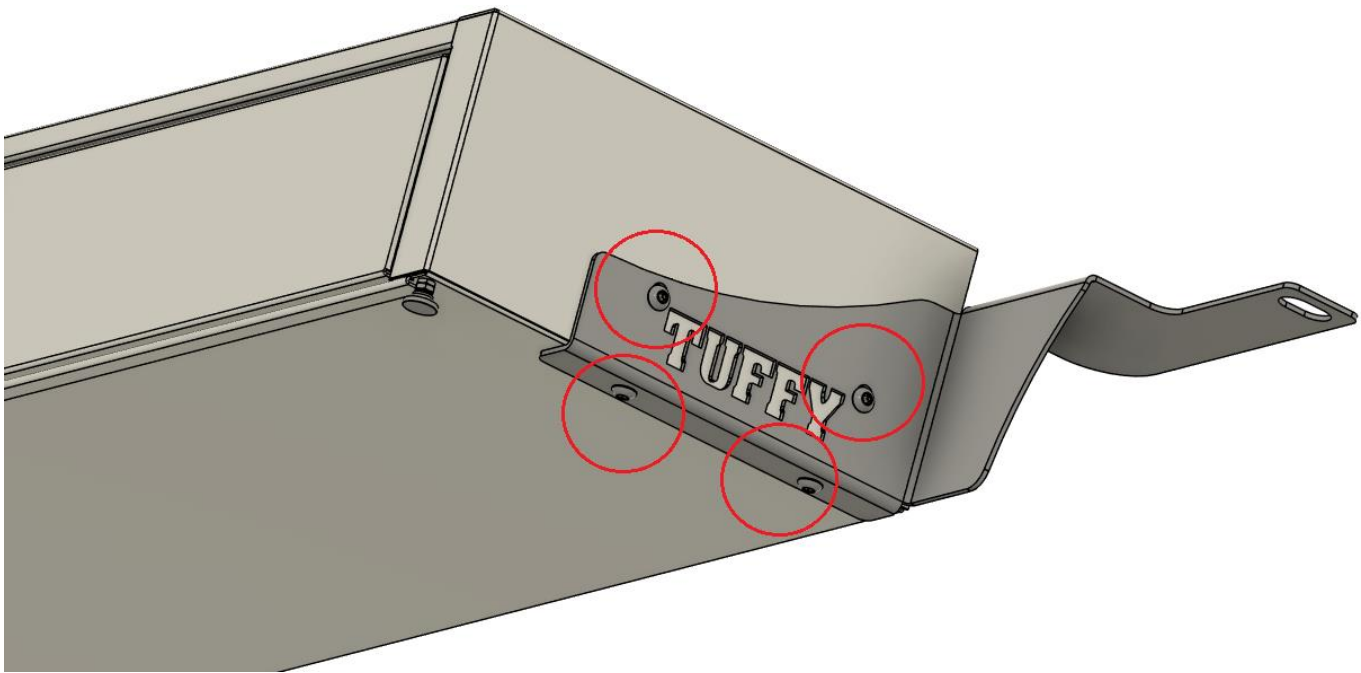

10. Thread the **#3 Self-Leveling Feet** into the thread inserts on the front bottom side corners of the Drawer Assembly, leaving approximately ½" of thread exposed.

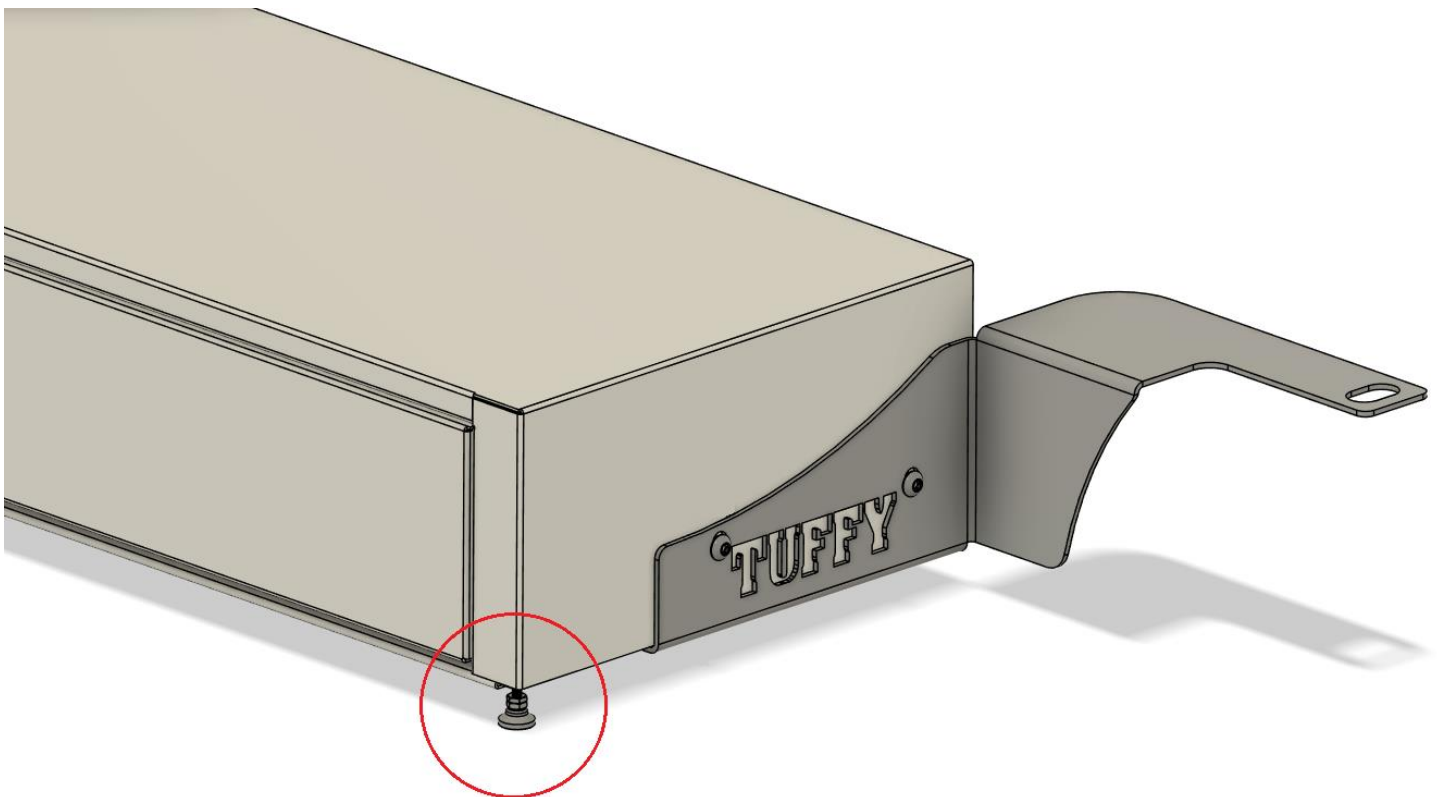

11. Remove both left and right-side OEM outer seat bolts (secures the seat to the floor) using the 10mm Socket and Ratchet.
12. Starting with one side, slide the drawer assembly rearward so the mounting bracket tab is between the OEM seat mount bracket and the carpet. Use the flat blade screwdriver between the seat mount bracket and floor of the vehicle to apply upward pressure to create space for the drawer mounting bracket to move into position. Look down from the top to see if it is in position for the OEM seat bolt to go through.
13. Thread the OEM seat mount bolt into the vehicle, making sure it passes through both the OEM seat mount and the holes in the Mounting Bracket. **Do not fully tighten at this time.**
14. Repeat Steps 12 and 13 with the opposite side.
15. Adjust the Self-Leveling feet until the Drawer Assembly is level. (The feet can also be used to level the Drawer Assembly so there is no interference with taller floor mats such as WeatherTech.) Tighten the jam nuts to hold the feet in the desired position.
16. Adjust the drawer side to side position in relation to the vehicle so that it is square.
17. Once the drawer is in the final position, use the 10mm Socket to tighten the OEM seat bolts.