



Installation Instructions

4 Runner

Please read instructions thoroughly before starting installation



****Remove all contents of the Softopper carefully to protect from scratches.****
Windows scratch easily! Keep protective layer placed between them when they are stacked.

Estimated Installation Time: 1-2 hours

Beginning Note: It is easiest to do the initial installation in warmer temperatures. The fabric of the top is at its tightest when it is new. Installing it in warmer temperatures initially will ensure that the fabric is easier to work with. The fabric of the top will relax slightly with time and become easier to put on.

****Safety Notes****

Please read the following before driving with the Softopper installed:

1. It is highly recommended that the provided boot cover/storage bag is used when the topper is in its retracted position. This will prevent the top from catching in the wind and extend the longevity of the top.
2. This product is designed to shield the occupants from ordinary weather conditions.
3. DO NOT rely in any way on the soft top to contain occupants within the vehicle, or to protect against injury or death in the event of an accident or a roll-over.
4. This top will not protect the occupants from falling or flying objects. Never operate vehicle in excess of manufacturer's recommendations or specifications.


Tools needed for installation:

- 1/2" Socket Wrench
- Drill
- #2 Phillips Drill Bit
- #2 Phillips Screwdriver
- #3 Phillips Screwdriver

Table of Contents

1. Inventory.....	3
2. Hardware Installation	
1. Bedrails.....	4
2. Header Bar.....	7
3. Folding Frame.....	10
3. Soft Top Canopy Installation.....	12
4. Retracting the Soft Top.....	16
5. Optional Driving Configurations.....	17
6. Softopper Care and Maintenance.....	18
7. Warranty Information.....	19

Your Softopper Kit Includes the Following Pieces

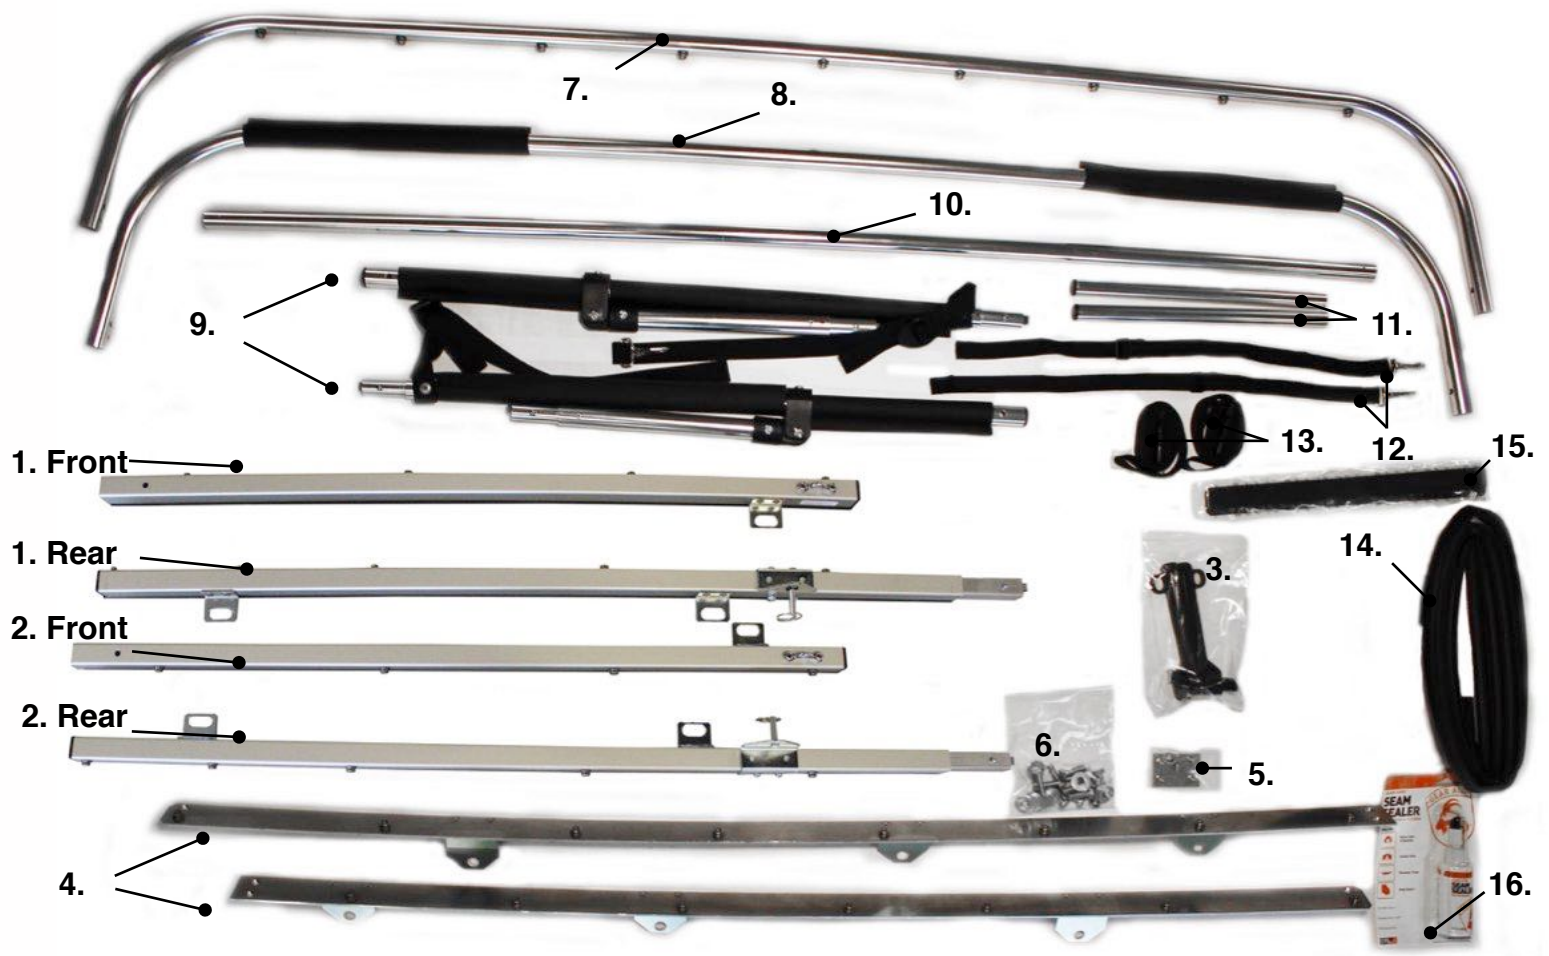

- | | |
|--|--|
| 1. Driver Side Front and Rear Bedrails | 10. Rear Window Bar |
| 2. Passenger Side Front and Rear Bedrails | 11. (2) 12" Rear Window Bars |
| 3. Bag Containing 2 Black Plastic Rear Bar Retainers | 12. 2 Safety Straps |
| 4. Driver Side and Passenger Side Header Bars | 13. 2 Adjustable Tensioning Straps with Buckles |
| 5. Small Bag Containing Header Bar Joining Bracket | 14. 96" Bulb Seal Strip |
| 6. Bag Containing (12) 1" Hex Bolts and Washers | 15. 3 Velcro Strips |
| 7. Rear Cross Bar | 16. 1 Container of Seam Sealer |
| 8. Forward Cross Bar | 18. 1 Softopper Canopy (not depicted above) |
| 9. Driver Side and Passenger Side Folding Frames | 19. 1 Protective Boot Cover (not depicted above) |

Bedrail Installation

****Note**** Colored instructions are available on our website, softopper.com, under **“Installation Instructions”**.


1. Locate the 2 driver side bedrails. There is a sticker which designates the driver side front bedrail.



2. Remove the white protective paper from the bottom of the bedrails that is covering the weather stripping. The weather stripping is NOT ADHESIVE, and will not stick to your truck.



3. Join the driver side front bedrail piece and the driver side rear bedrail piece by pressing down on the push pin, as shown (bedrail/pivot bracket style may differ), and sliding the rear bedrail into the front bedrail until the push pin finds the hole and pops through. Make sure that you have the driver side rear bedrail piece by ensuring that the snaps on the front and rear bedrails are facing the same direction.

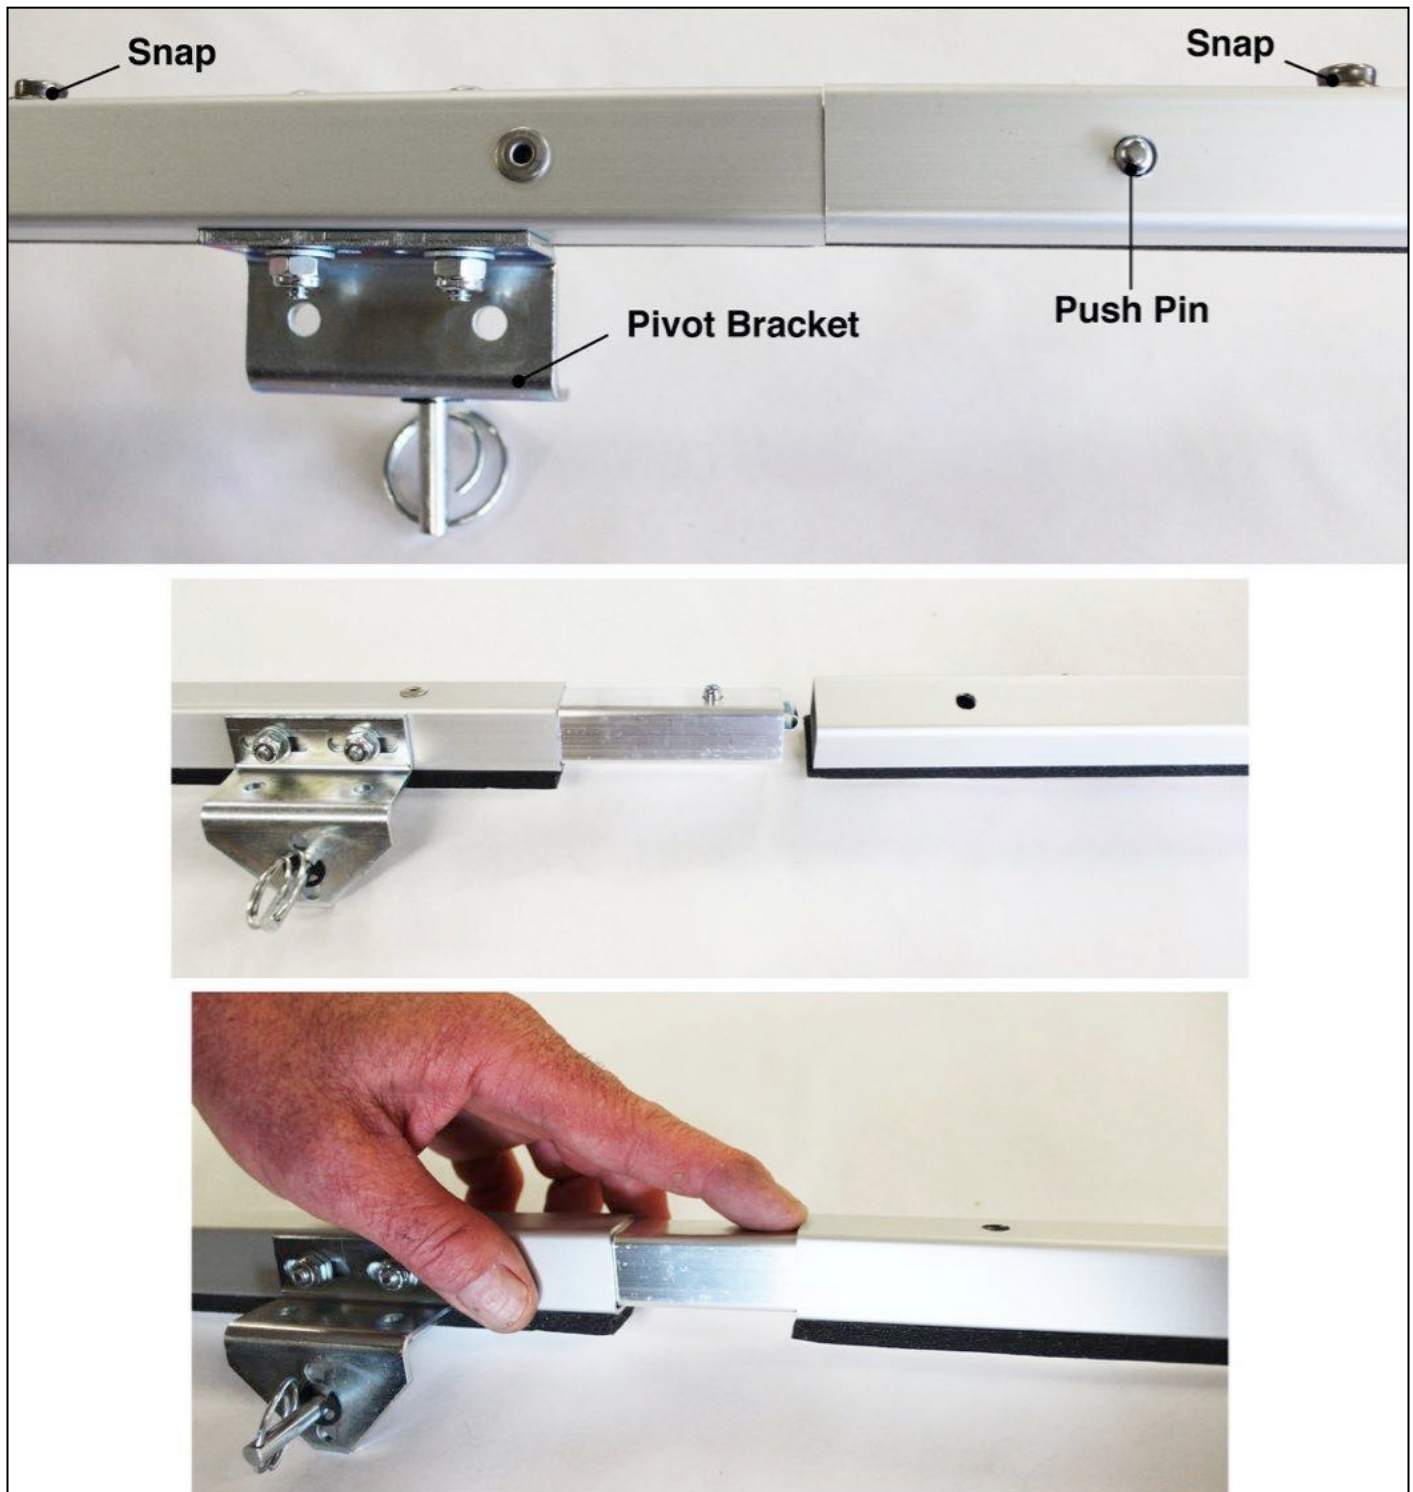

4. Repeat for passenger side bedrails.

5. Locate the 2 black, plastic rear bar retainers and the small bag containing hardware.
6. The plastic retainers are marked “A” and “B”. “A” is the driver side piece, and “B” is passenger side piece. The retainer slot should face inward and the ring should be up as shown.



7. Using the (4) #12 x 3/4” panhead screws and a #3 Phillips screwdriver, mount the rear bar retainers to the pre-drilled holes on the back end of the rear bedrail as shown. Center the




screws in the slots.


8. Repeat on passenger side bedrail with the plastic retainer marked “B”.
9. Save the 2 remaining, self drilling screws in the bag for later in the installation process.
10. Using the hard top bolts that you previously removed from the vehicle or the supplied 1” Hex bolts and washers, mount the bedrails onto the vehicle. Center the bolts in the slots and fasten securely. Make sure that the snaps face outward and the pivot bracket faces inward.

Header Bar

1. Locate the driver side and passenger side header bars and the small bag containing the header bar joining bracket.

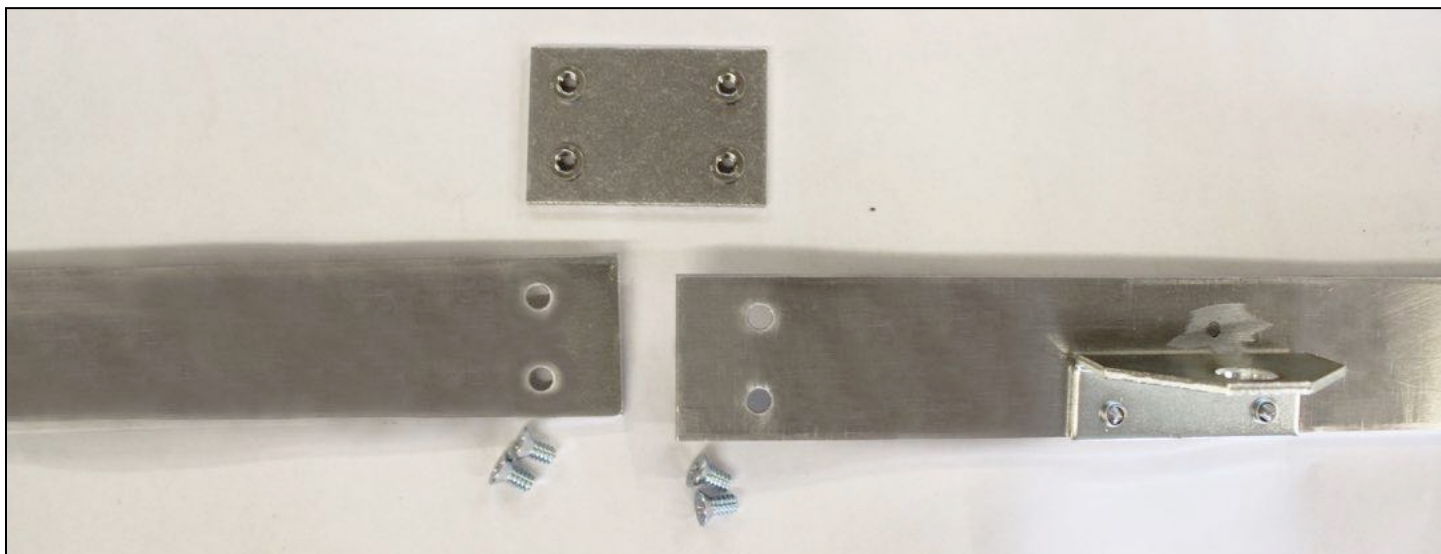

2. Place bracket on the bottom of the header bars with the pemnuts on the bracket facing down, the header bar brackets facing down, and the snaps on the header bar facing up.
3. Screw the 4 screws in through the top of the header bars and bracket to join the two header bars.

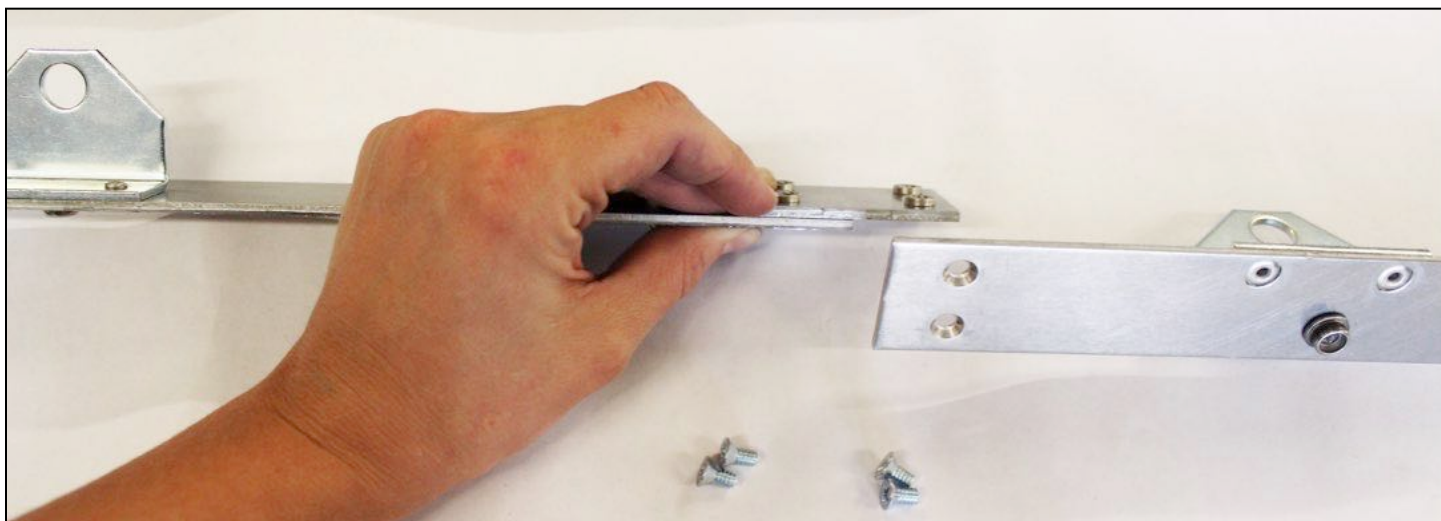

4. Locate the factory weather stripping that should already be installed along the cab frame of the vehicle. If this weather stripping is severely damaged, please call us and purchase another 96" strip of bulb seal. The header bar will mount over this, creating a weather seal. If you do install our bulb seal, thoroughly clean the area with a 50/50 water/alcohol solution or a similar household cleaner before applying the bulb seal.



5. Using the bolts that were removed with the hard top and/or the provided bag of 1" Hex bolts and washers, secure the header bar loosely to the vehicle through the top 4 brackets only for now. The snap studs should face up, the brackets down, and the header bar should rest against the weather stripping on the rear of the cab. The snaps should be forward of center.



6. Shape the curved area of the header bar tightly against the contour of the vehicle's cab and weather stripping. Do this by pulling down and pushing inward, even over-bending the bar slightly.
7. Once the bar is centered, loosely fasten the remaining bolts into the header bar. If the desired weather seal is not achieved after the initial bending of the header bar, you may have to remove the header bar and bend it a little more so that it will hold tightly to the weather seal.
8. Clean the top rear edge of the entire header bar with a 50/50 water/ alcohol solution or a similar household cleaner.



9. Using the provided bulb seal strip, place it along the top, back edge of the header bar as shown. The small flange on the bulb seal should face upward and backward toward the rear of the vehicle.



10. Locate the 2 small pieces of bulb seal in the kit. Peel off the red, protective film, and adhere the bulb seal to the vehicle, filling in the gap between the front of each bedrail and the bottom/ends of the header bar.



Folding Frame Assembly and Installation

1. Locate the Rear Cross Bar (the one with the snaps) and the 2 adjustable tensioning straps with buckles.
2. Slip the small loops on the ends of the tensioning straps onto the rear cross bar such that the tensioning buckle will be oriented downward when attached to the forward cross bar as shown.




3. Join the two cross bars to the 2 folding frame uprights by coordinating the **COLORED DOTS** provided on the pieces, and ensure the push pins are locked into their holes.
****Important: Keep fingers clear of the sharp, metal junction where the cross bars will meet the folding frame when clipping them together. Injury is likely if fingers get pinched.**



4. ****Tip: It helps to stand the folding frame uprights up, and with another person, or a table to rest one end of the cross bars on, jiggle the cross bars down to join them to the uprights. (4 cross bars depicted above)**

5. Once connected, slide the 2 black bar sleeves on the forward cross bar down to meet the folding frame. These prevent the aluminum cross bars from touching the windows. When the bars are hot, direct contact can cause discoloration in the windows.
6. Remove the safety rings from the pivot pins.
7. Using the holes near the bottom of the folding frame, slide the frame onto the pivot pins. **Secure the safety rings back on.** [The most common installation error is installing the frame on backwards. Ensure that the rear cross bar will extend rearward when folding frame opens.
8. Do NOT secure the rear safety straps yet.

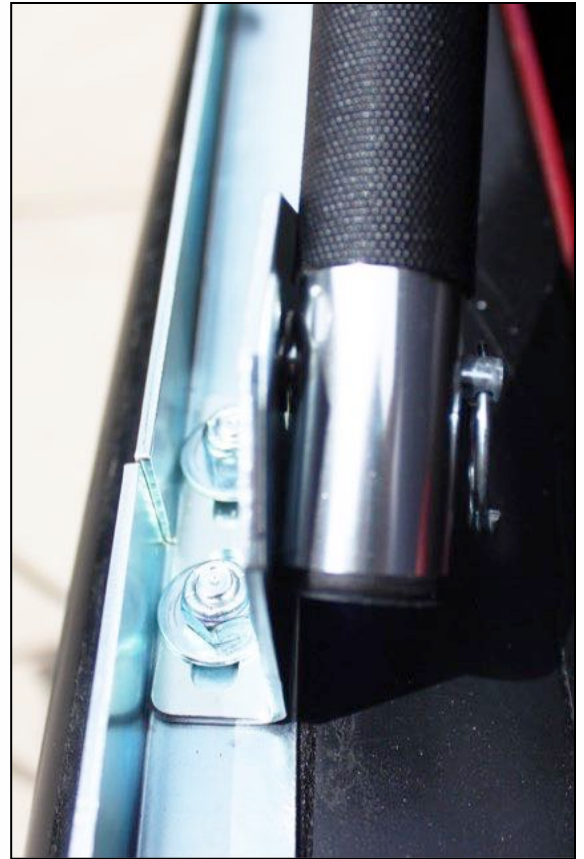


Soft Top Canopy Installation


1. With the tailgate open, lower the folding frame to the rear of the vehicle.
2. Place the canopy on the tailgate with the rear canopy snaps facing up as shown.




3. Place the 2 tensioning straps between the 2nd and 3rd snaps on each end of the rear cross bar as shown.

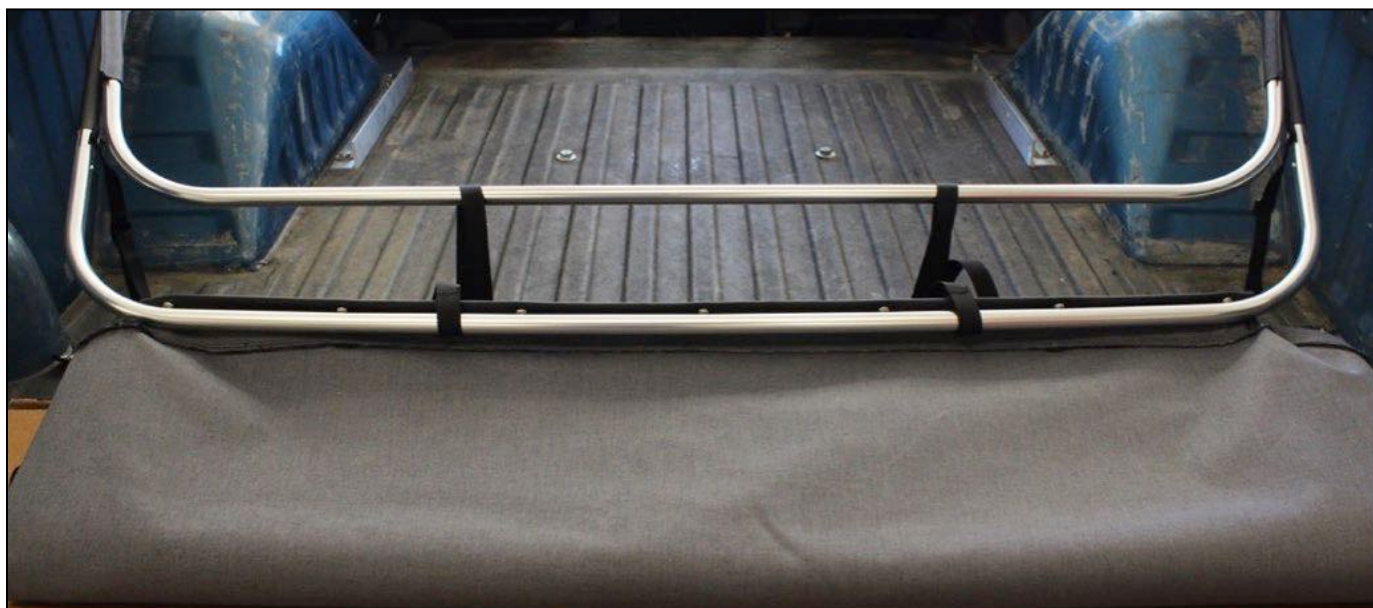

4. Attach the two upper tensioning straps to the forward cross bar by releasing the side release buckles and reattaching. Make sure there are no twists in the straps. Keep loose for now.
5. Snap the canopy to the rear cross bar by slipping the fabric under the bar and around as shown.
6. Stand on the tailgate and carefully lift the entire canopy and folding frame up and forward until you can rest the front of the canopy over the cab roof and secure the roof snaps to the header bar beginning with the center snap.
7. From the ground, loosely latch the 2 rear safety straps to the rings on the plastic rear bar retainers as shown above. The straps are already riveted to the folding frame.

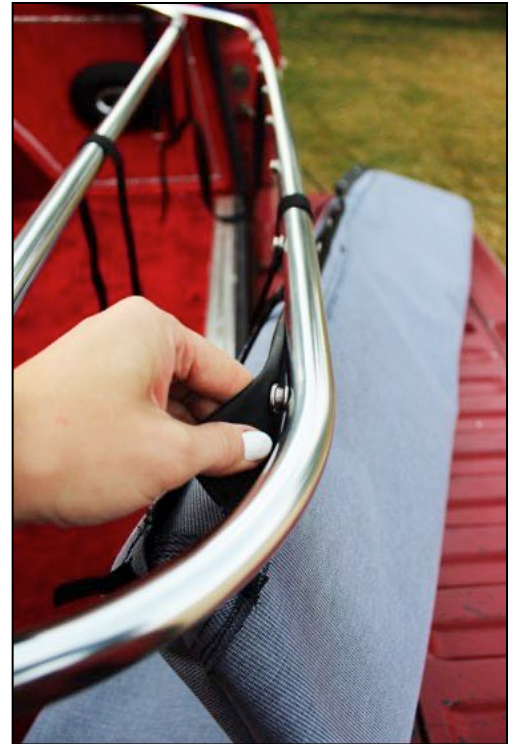

8. Locate the 2 buckling safety straps from the large bag. Hook the straps into each bedrail loop on either side of the vehicle, and just let the buckle end hang down into the vehicle. These safety straps are to be buckled to the front most buckle on the canopy whenever driving with the side panel windows rolled up and buckled. The straps will prevent the chance of the canopy coming unsnapped from the header bar while driving at high speeds.
9. Undrape the side window panels and rear window panel, and let them hang loosely.
10. While pulling down on the rear cross bar, tighten the 2 rear safety straps (not the upper tensioning straps yet). The safety straps should be snug, not loose nor overtightened.
11. Connect the forward most snap on the side panel to its mate on the bedrail on the driver side and the vertical snaps on the cab.
12. Connect the rear most snap on the same panel to its mate on the bedrail by pulling down on the rear cross bar and pulling on the fabric if necessary.
13. Tighten the rear safety strap further to relieve excess tension on the rear snap. ****Note that it is a good idea to share tension between the rear safety straps and the rear most snaps instead of having all the**

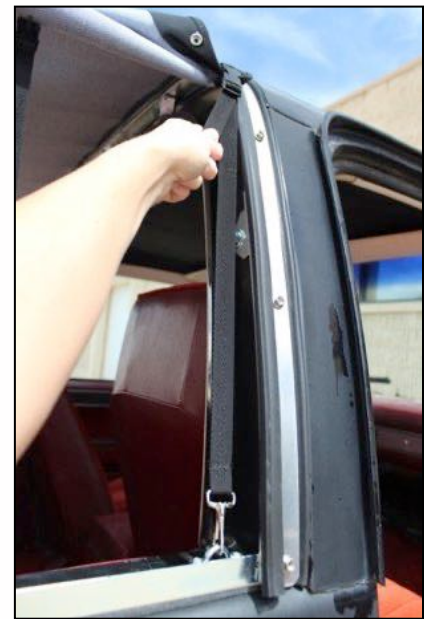

tension only on the snaps. This will also help with any wrinkles in the rear corners.

14. Now snap the rest of the snaps on the driver side.
15. Repeat the above on passenger side. Note that we recommend snapping the front most and rear most snaps first each time you install the top on the vehicle. This makes it easier to snap the remaining snaps and align the canopy properly.
16. Adjust the 2 upper tensioning straps between the forward and rear cross bars until there is adequate upward pressure to give the canopy its taught shape.
17. If there is a wrinkle in the fabric between the two front most snaps for the side panels, adjust the bedrails until tension in fabric is desirable. Securely fasten all bedrail bolts, the screws and nuts on the bottom of the header bar.
18. Locate the straight Rear Window Bar, the (2) 12" bars, and the two remaining self drilling screws that were in the bag containing the black plastic rear bar retainers.



19. Insert the 2 shorter bars into the ends of the longer bar with the plastic end caps facing out.
20. Standing at the rear of the vehicle, push the two ends of the bar assembly into the rear plastic bar retainers while adjusting the length of the bar assembly as necessary. It should fit securely end to end into the given space within the plastic bar retainers.
21. Center the long bar over the other two 12" bars.
22. Using a drill and a #2 Phillips bit, screw the 2 small self drilling screws into the pre-drilled holes to join the 3-bar assembly.
23. Now remove the bar and slide it into the sewn-in sleeve at the lower part of the rear window panel. Center the bar.



24. Join the zippers in the upper corners of the rear window panel and zip closed the window panel.
25. Clip the bar back into the plastic retainers.
26. Close the tailgate while lifting up slightly on the fabric hanging at the bottom of the window panel.
27. ****Optional:** Use the provided extra strips of velcro to hold the bottom of the rear window flap to the tailgate. Wipe clean and dry the tailgate surface before placing the sticky side of the velcro onto the vehicle. Before putting excessive tension on the velcro, we recommend letting it adhere for **24 hours**.

Installation Complete



Retracting the Soft Top

1. Undo all side snaps.
2. Raise the rear window panel zippers all the way to the top without disconnecting them.
3. Release the rear window retainer bar.
4. Place the side panels up onto the roof canopy neatly.
5. Place the rear window panel up onto the roof as shown.



6. Loosen or release the 2 rear safety straps.
7. Undo all cab roof snaps.
8. Carefully make multiple folds backward from the front of the canopy until it is about the same size as when it originally came out of the box. This will ensure that the protective boot cover fits over the folded canopy.
9. While leaving the 2 safety straps out, place canopy in protective boot cover, and secure the boot cover straps.



10. ****DO NOT OPERATE VEHICLE WITH SOFTOPPER IN RETRACTED POSITION WITHOUT INSTALLING THE BOOT COVER.** A parachuting effect may occur while driving without boot cover secured over canopy in its retracted position.
11. Once the canopy is in the protective boot cover, hook the 2 safety straps back onto the rear bar retainers and tighten.

Optional Driving Configurations

1. Fully retracted with the boot cover installed and the safety straps buckled.
2. Rear window rolled up and buckled.
3. Rear window completely removed.
4. Sides and rear window rolled up.
Do not drive with the the sides rolled up without also rolling up or removing the rear window.
5. To fully remove the Softopper once it's within the boot cover, release the 2 safety straps, remove the 2 safety rings from the pivot pins by twisting turning them, and completely remove the top. **Reinstall the safety rings.**



Softopper Care and Maintenance

Your top is made of the finest materials available. To keep it looking new and for product longevity and durability, it will need periodic cleaning and maintenance. All pieces are individually replaceable; call 1-800-810-7227, or order your parts online at Softopper.com.

Washing: The fabric should be washed from time to time using a mild soap and warm water. Be sure to rinse all soap off the top when washing is complete.

Vinyl Windows: Windows should be kept clean to avoid scratching. Wash with a water-soaked sponge or cloth and a mild dishwashing detergent. Do not use a coarse brush on the windows and never wipe the windows when they are dry.

COLD WEATHER: As with all automotive and marine vinyls, extreme care must be taken when rolling up or folding the windows in cold temperatures. Vinyl becomes stiff in cold temperatures and may crack. Retracting the Softopper in cold temperatures is not recommended and will void the warranty for the windows (see Warranty information for more detail on length of window warranties). When opening the rear of the Softopper in cold weather, be sure to raise the zippers as high as possible so that any folding will occur to the topper fabric and not to the vinyl window.

Zippers: Keeping the zippers clean and lubricated with a silicone lubricant will help prevent damage and keep the zippers in smooth working condition.

Leakage: As with any sewn automotive top there is always a slight risk of leakage. Right out of the box the Softopper may not be 100% waterproof. If you experience any water seeping through at the seams, apply Seam Sure (sold separately), on the **INSIDE** of the affected seams. Shake Seam Sure well and apply liberally to the inside seams concentrating on areas where needle and thread penetrated the fabric.

Snap: Keep snaps clean and lubricated with a silicone lubricant to help prevent snaps from sticking to the studs. If a snap does become stuck to a stud, use a screwdriver and gently pry apart to prevent damage to the snap or top fabric. If any snaps need to be replaced due to sticking or damage please call Softopper and we can send out a small do-it-yourself repair kit.

For further information please contact:
Softopper LLC, customer service
(800) 810-7227 or (303) 304-0533

Warranty

We warrant all of our Softoppers to be free from defects in material and workmanship for a period of one year, with the exception of vinyl windows and zippers, provided there has been normal use and proper maintenance.

Vinyl Windows are warranted for a period of 3 months from the date of purchase.

Zippers are guaranteed to be in perfect working condition when leaving the factory. Due to atmospheric conditions, dirt, sand, road grime, dust, and abrasive cleaners, etc., zippers are warranted for a period of 6 months from the date of purchase.

Toyota 4 Runner, Jeep Wrangler, Blazer, Jimmy, Scout, Bronco, and RamCharger side curtain windows are warranted for 45 days from the date of purchase. Retracting or closing the top when the temperature is below 40 degrees may void the warranty on the side windows, as clear vinyl plastic can crack very easily at these temperatures. Use caution when retracting the top or cleaning off the windows in freezing temperatures.

Softopper Consumer Returns Policy

We want you to be thrilled with your Softopper purchase. We are committed to providing you with the highest quality products possible, worthy of your trust and confidence.

If for any reason, you have concerns, questions, or need assistance with a product, please reach out to us: Contact us before returning it. We have found that when a product is not working as expected, a few adjustments or corrections can often set things right.

You may return a Softopper product within 30 days of your purchase, provided that the product is in its original packaging, and includes all original packaging. Please take note of our Exclusions on Returns:

We cannot accept products that are damaged due to negligence, abuse, or misuse.

IMPORTANT: ALL RETURNS MUST REFERENCE AN APPROPRIATE RGA (RETURNED GOODS AUTHORIZATION) NUMBER, WHICH MAY BE OBTAINED FROM A SOFTOPPER CUSTOMER SERVICE AGENT AT #800-810-7227, VIA LIVE CHAT, OR BY EMAILING info@softopper.com. PLEASE WRITE THE RETURN AUTHORIZATION NUMBER BELOW OUR ADDRESS ON THE OUTSIDE OF THE BOX. ANY RETURNS WITHOUT A VALID RETURN AUTHORIZATION NUMBER WILL BE REFUSED.

Returns Policy

Please call us at 800-810-7227, via Live Chat, or log in to your account, for an RMA and assistance. Returns must have an appropriate RMA (Returned Materials Authorization).

- When returning a product to Softopper®, please return all parts in their original packaging. All products must be returned in their original box and include all original packaging materials.
- There is no restocking fee for new/unopened products. If the merchandise has been used, installed, or damaged, the return will be subject to a 20% restocking fee.
- Original shipping, return shipping, taxes, and handling costs are non-refundable.
- Refunds for installation are not permitted once services are rendered.
- Softopper® must receive returns within 30 days of RMA authorization.
- Please allow 10–15 business days for us to process a return after it arrives at our offices.

Exclusions on Returns

- We cannot accept products that are damaged due to negligence, abuse, or misuse.
- We cannot accept products that have not been used in accordance with their documentation or installation instructions.

Returns of Damaged Shipments

If you receive a damaged package, please contact Softopper customer service at info@softopper.com within 30 calendar days of receipt of your package, for assistance.

Regarding damaged shipment claims:

- Please be prepared to describe the damage and provide photographs.
- Once photographs have been captured, please open the box with the inventory what is still contained inside, photographing any damaged parts.
- Softopper will replace any of the parts listed under a warranty.
- Returning a damaged shipment will follow the same procedure and policy as above.