

SOFTTOPPER[®]

Softopper 3rd Brake Light Installation Instructions




Note


Due to the various methods that manufacturers use to access the third brake light, it is recommended you have the 3rd Brake Light Kit installed by a professional installer.

1. Separate the center of the top of the rear window from the canopy.
2. Insert the 3rd brake light assembly between the canopy and the rear window ensuring the 3rd brake light assembly is centered on the canopy. (Fig 1)



3. From inside, unsnap half of the snaps on the rear snap flap and place the wire harness between the rear cross bar and flap then re-snap the flap to the cross bar. (Fig 2) If the snap flap is difficult to re-snap, release the tension from the safety straps and unsnap the side panels from the bed rails.

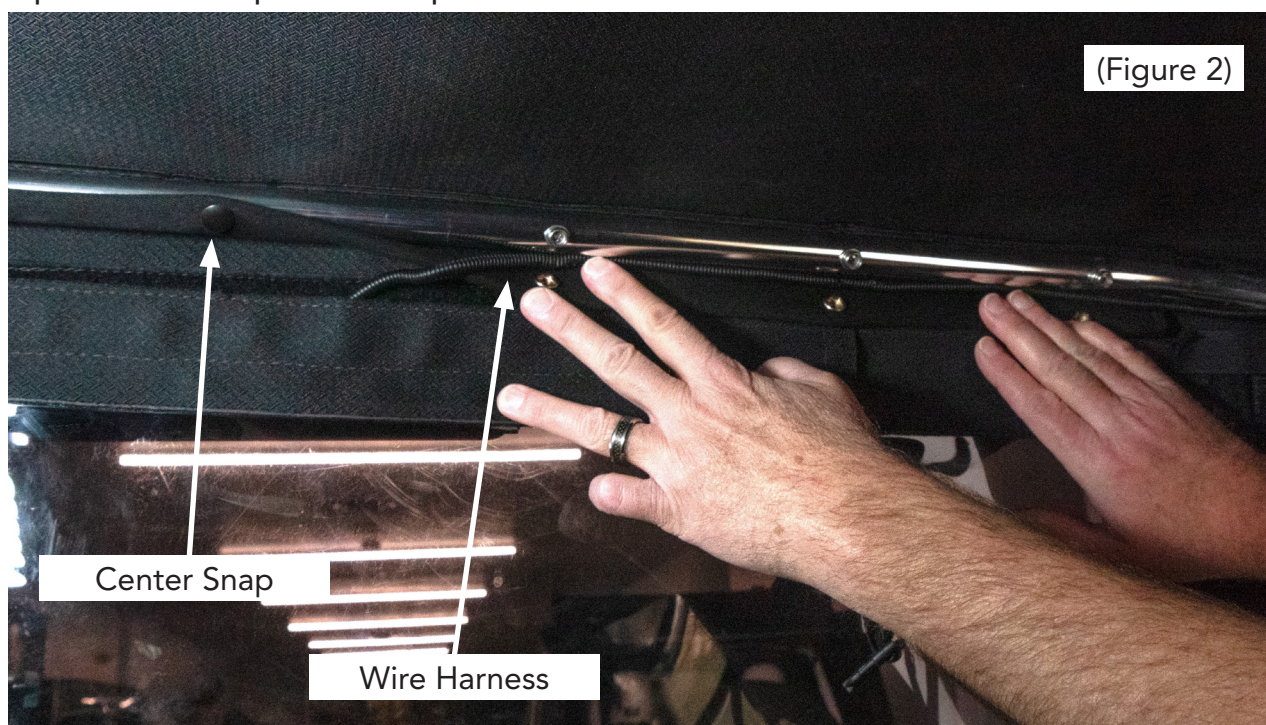


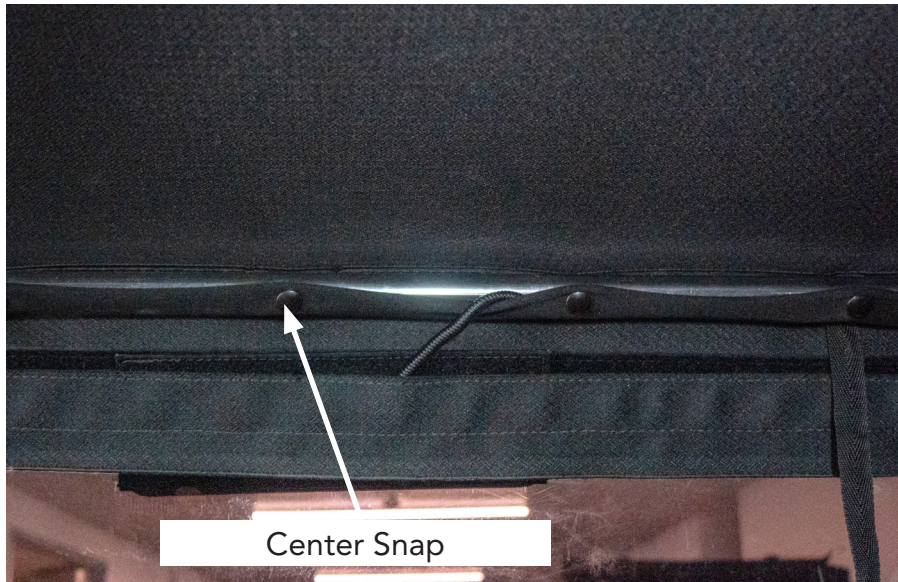

5. Use wire ties or tape (not included) to secure the harness to the folding frame.
NOTE: Place the last wire tie (or tape) next to the pivot pin. (Fig 3)



6. Plug the 2 wire connectors at the end of the 3rd brake light assembly wire harness and the 29 foot wire harness together. (Fig 4)

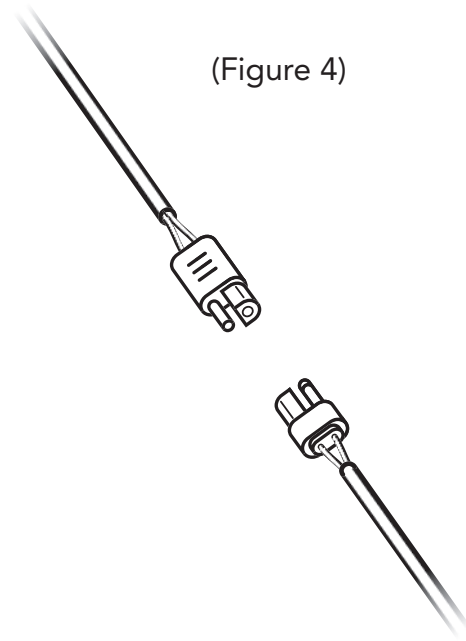

7. Attach the red wire from the 29 foot wire harness to the positive wire of the vehicles brake light and the black wire from the 29 foot wire harness to the negative (ground) wire of the vehicles brake light.

