


Doggie Window


Installation Instructions

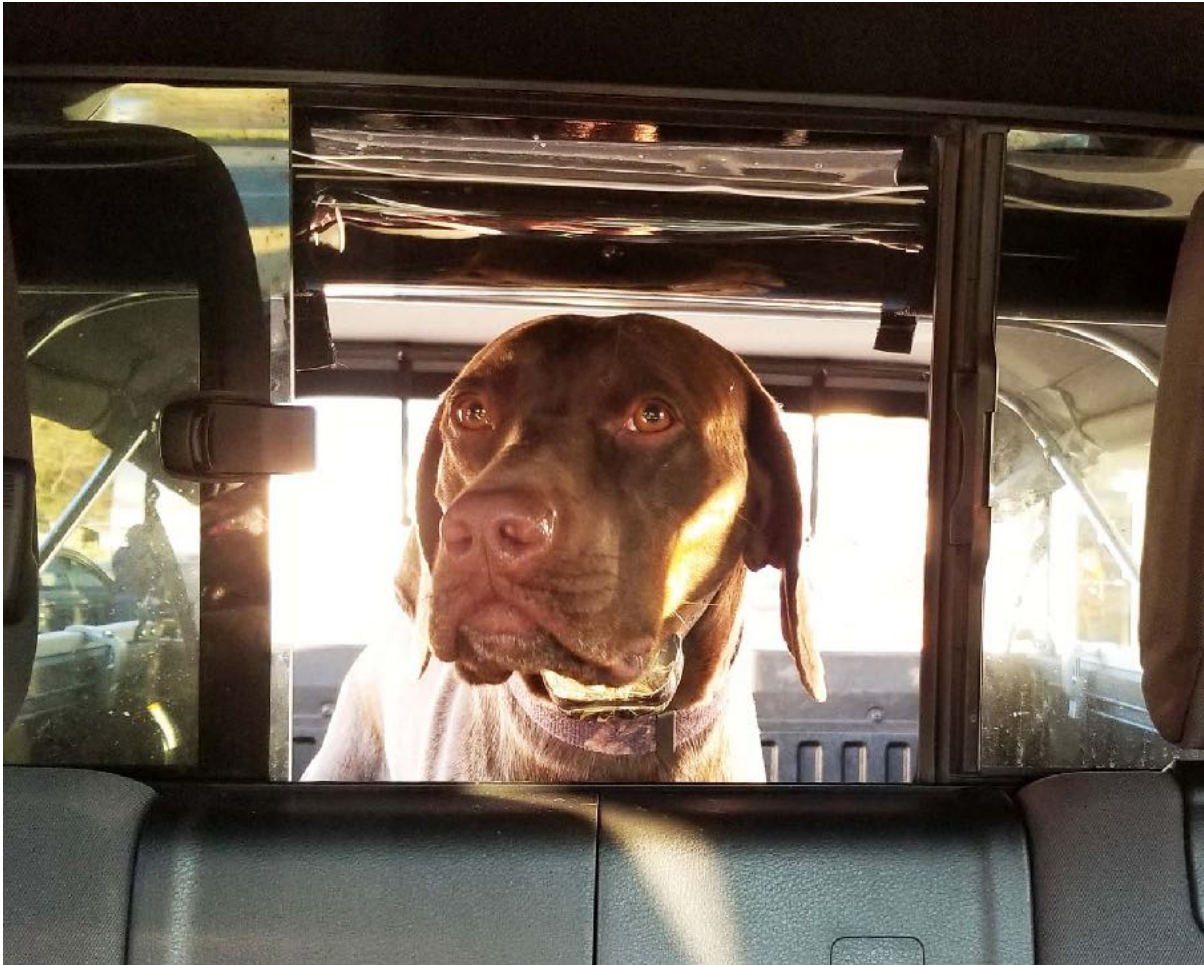


Tools Needed:

Pen or marker
Ruler
Scissors
Razor or Exacto Knife

1. Remove your front window from the Softopper and your truck. It is just adhered to the Softopper with velcro along the top and the sides.
2. Place the window face down on a large, flat surface using caution not to scratch the window. Cardboard with newspaper laid over it is a good platform to use.
3. Locate the tools needed listed on the previous page.
4. Decide how large of a hole you will want/need to make for your dog. We recommend any size up to 15 inches wide. The flap that will cover the hole is 24 inches wide and should overlap the hole by at least 4 inches on each side in order for the hole to remain waterproof when covered by the flap.
5. There is a small hole/dot at the top of the front window on the inside/back side of the panel which marks the center of the window. Measure out from the center of the window up to 7.5 inches in each direction, and using the ruler or another straight edge, draw a line on the clear vinyl window straight down from top to bottom.
6. Ensure that the window is on a surface that can be cut into with the razor/Exacto knife.
7. Cut out the portion of the window that you drew using either the razor, Exacto knife, the scissors or any combination of those you'd prefer. Be sure to only cut out the clear, vinyl and not any of the fabric.
8. On the front side of the front window, center the doggie window flap, and adhere it by joining the velcro at the top.

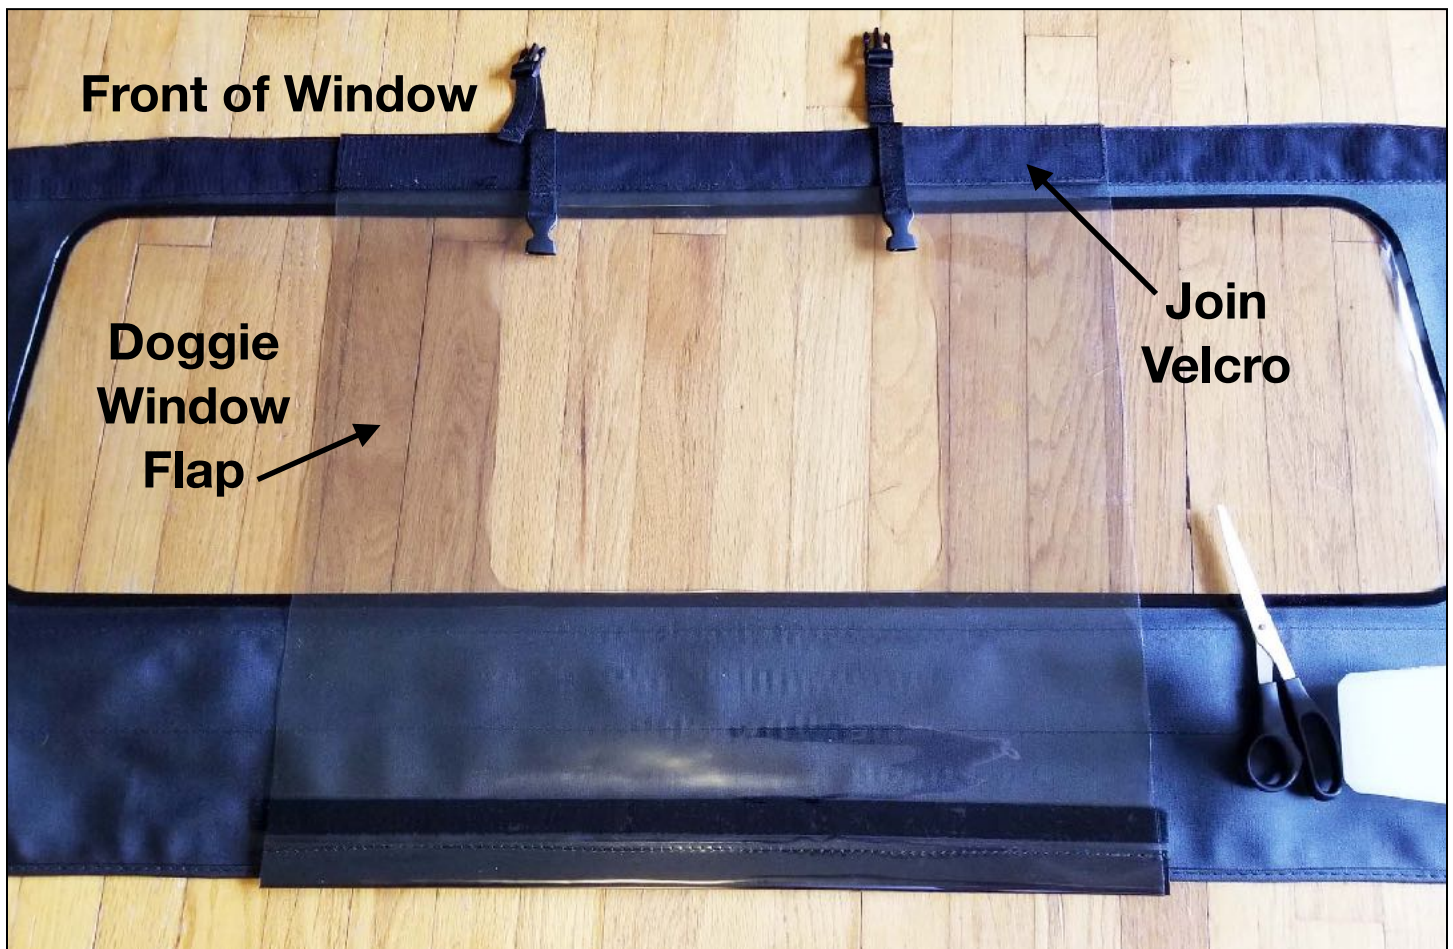

9. Reinstall the front window onto the Softopper from inside the truck bed while at the same time placing the 2 provided roll up straps between the velcro layers of the Softopper and the velcro on the front/doggie windows as shown. Ensure that the front window is centered by aligning the hole in the top of the front window with the center snap on the Softopper crossbar.

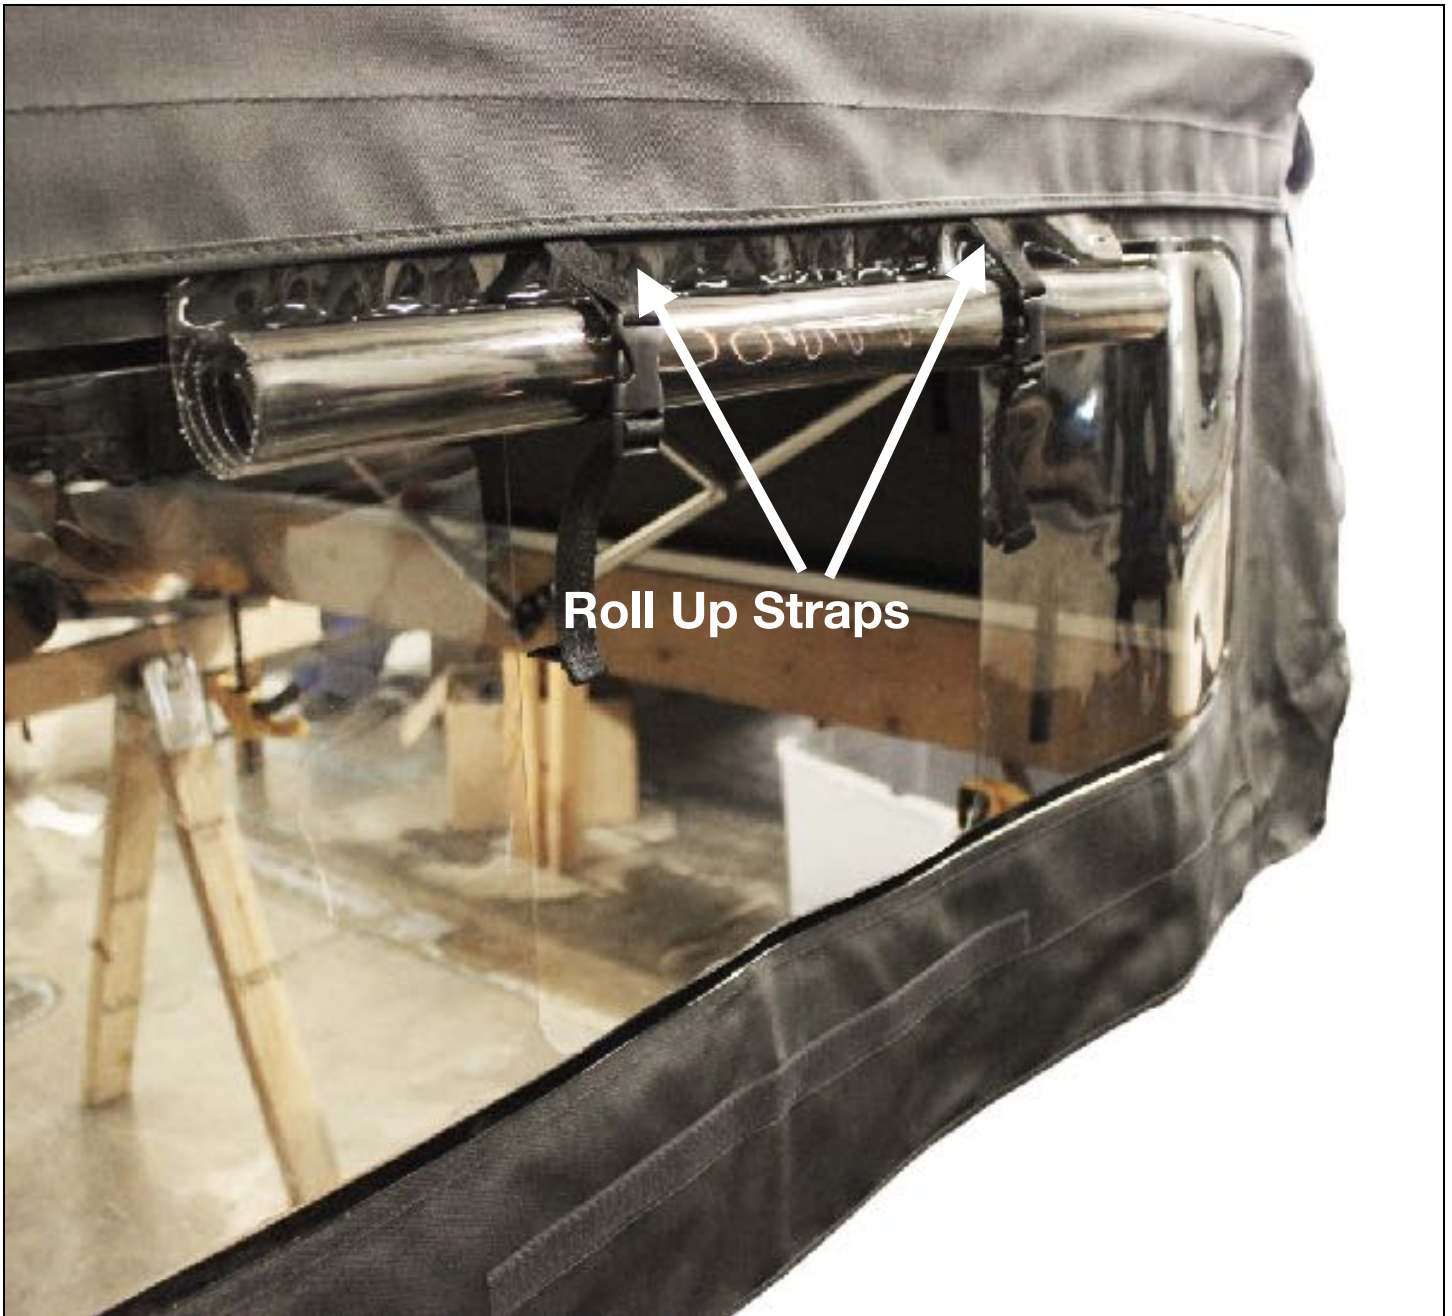

10. Be sure to completely secure the front window back into place, as per the generic Softopper instructions, before driving.