



Softopper® Heavy Duty Awning Mount Installation Instructions

Please read the instructions thoroughly before starting the installation



Estimated Installation Time: 1/2 hour

The Heavy Duty Awning Mount is designed to work on either driver or passenger side of the vehicle.

****Safety Notes****

Please read the following before driving with the Exo Truck Bed Rack installed:

1. **DO NOT** rely in any way on the Exo Truck Bed Rack to contain occupants or objects within the vehicle bed, or to protect against injury or death in the event of an accident or a roll-over.
2. The Exo Truck Bed Rack will not protect the occupants or objects from falling or flying objects.
Never operate vehicle in excess of the manufacturer's recommendations or specifications.

Tools needed for installation:

1/2 inch socket
1/2 inch wrench



Parts included:





1. Remove the 4 bolts, nuts and 8 washers that hold the top channels to the uprights.

2. Place the awning mounting bracket on top of the top channel aligning the holes.

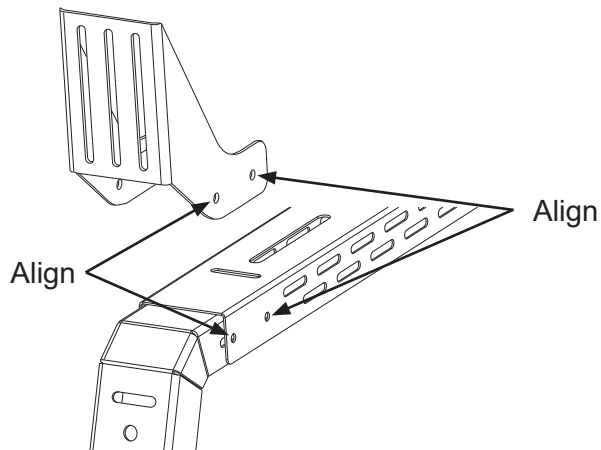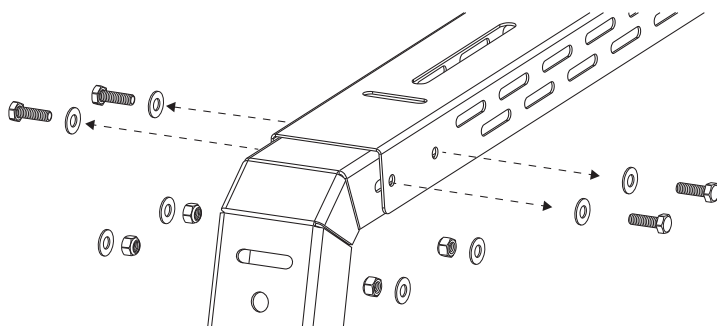

3. Replace the 4 bolts, nuts and 8 washers that hold the top channels to the uprights.

Be sure all of the fasteners are tight and the brackets are secure.

