



Softopper® Standard Duty Awning Mount Installation Instructions

Please read the instructions thoroughly before starting the installation



Estimated Installation Time: 1/2 hour

The Standard Duty Awning Mount is designed to work on either driver or passenger side of the vehicle.

****Safety Notes****

Please read the following before driving with the Exo Truck Bed Rack installed:

1. **DO NOT** rely in any way on the Exo Truck Bed Rack to contain occupants or objects within the vehicle bed, or to protect against injury or death in the event of an accident or a roll-over.
2. The Exo Truck Bed Rack will not protect the occupants or objects from falling or flying objects. Never operate vehicle in excess of the manufacturer's recommendations or specifications.

Tools needed for installation:

1/2 inch socket
1/2 inch wrench


Parts included:



1. **Standard Duty Awning Mount (3 each)**
2. **5/16•18 x 1 inch Bolt (9 each)**
3. **5/16 inch Flat Washer (18 each)**
4. **5/16•18 Lock Nut (9 each)**
5. **5/16 inch Fender Washer (9 each)**




Secure the brackets to the uprights using three bolts, three nuts and six washers per bracket.

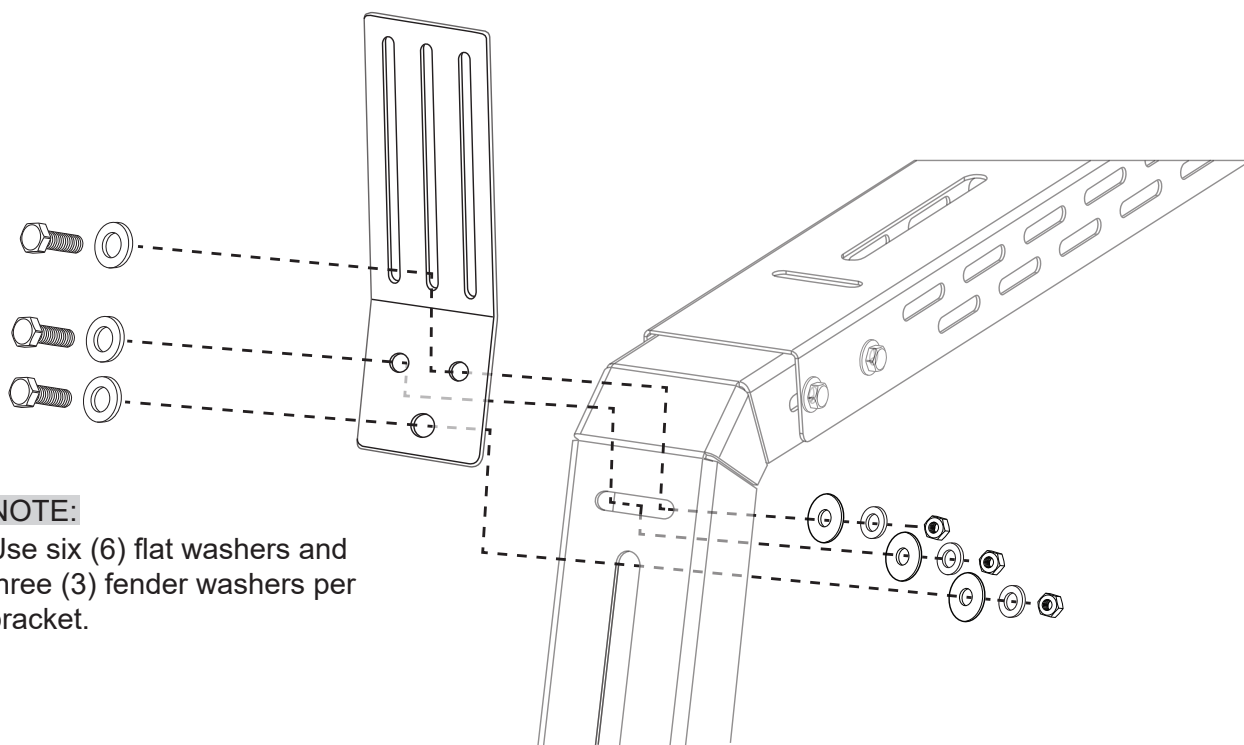

NOTE:

Use six (6) flat washers and three (3) fender washers per bracket.

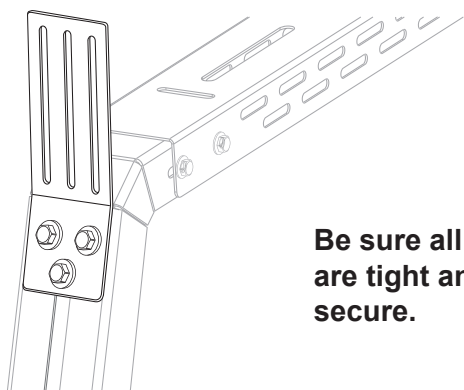

Be sure all of the fasteners are tight and the brackets are secure.